

Assembly Instructions

BIN STORAGE UNITS


MODEL
1W763 7W023
CC40

PARTS LIST

REFERENCE LETTER	QUANTITY AND DESCRIPTION	PART NUMBER
A	<input type="checkbox"/> 4 Posts	1W763P
B	<input type="checkbox"/> 7 Shelves	1W763S
C	<input type="checkbox"/> 1 pr. Back Brace (A)	1W763BB
D	<input type="checkbox"/> 1 pr. Side Brace	1W763SB
*	<input type="checkbox"/> 1 Hardware Pack	1W763HP


HOW TO ASSEMBLE

- Bolt shelves to posts, starting at top and proceeding on 6" centers. Use 8 nuts and bolts per shelf.
- Attach back (A) brace to center of top shelf then to posts (Referral C), attach one side brace to each side (Referral D).
- Square off completed unit and tighten all bolts and nuts.
- Assemble bin boxes as instructed below and insert 8 - 4" bins per shelf and 4 - 8" bins per shelf.

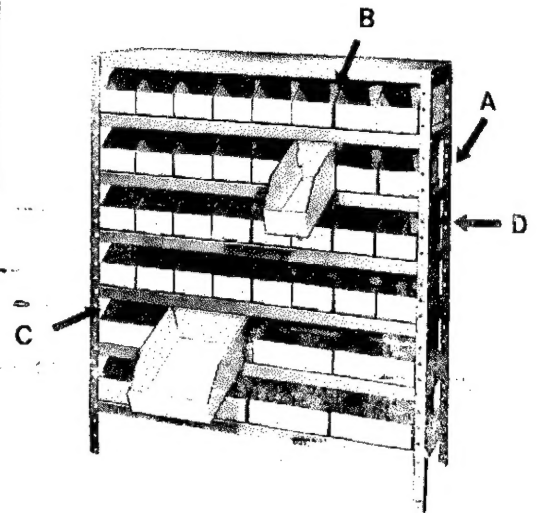

NOTE: 1W763 — Shipped Without Bin Cartons

BIN BOX ASSEMBLY

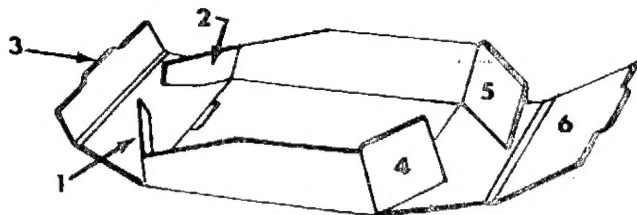

- Fold up box on scored lines using following procedure:
 - Fold flap (1) followed by flap (2).
 - Fold flap (3) over (1) and (2) and lock into die cut slot.
 - Use same procedure for flaps (4), (5) and (6).

edsal

4400 south packers avenue • chicago, illinois 60609

MANUFACTURERS OF QUALITY STEEL EQUIPMENT FOR INDUSTRY, OFFICE & INSTITUTIONS